


Installation instructions


L&R-Kit

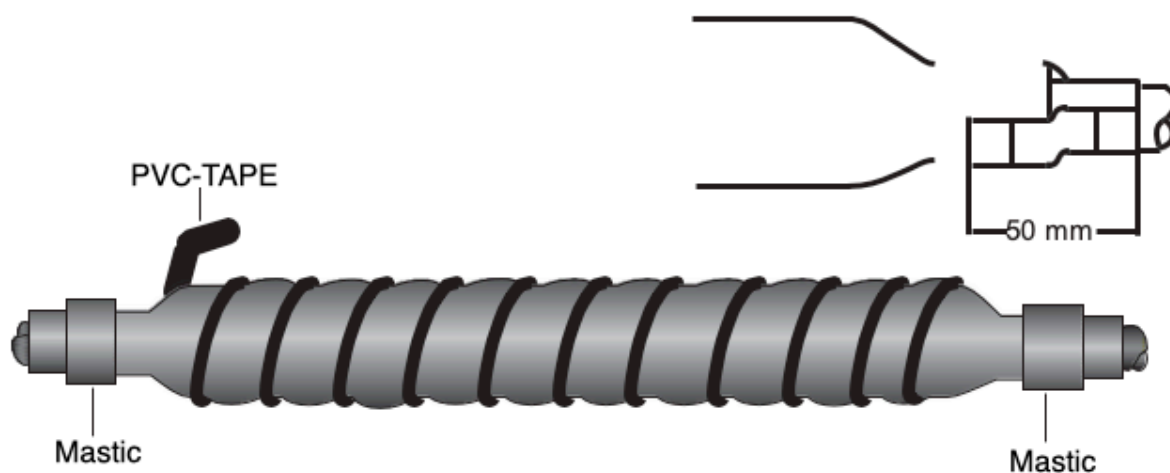

- Wrap one layer with mastic beginning 10 mm in on the cable jacket and in towards the center of the joint, a total of 50 mm winding length.
- Place the foil all the way over the mastic, wrap another few turns with mastic to seal
- Then adjust the other end of the foil so that the length is adapted to the mastic winding of the other cable end. Also seal this side with a few turns of mastic. Squeeze the foil over the joint and attach it with PVC tape.

Installation instructions

Mastic-sealing for Screen test.

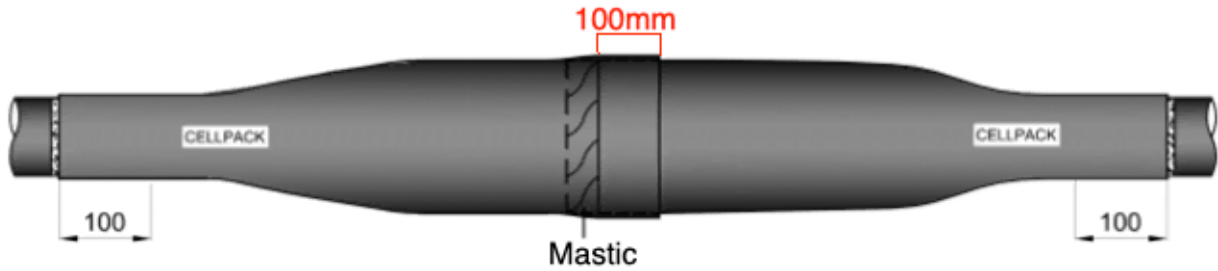

- For cables to be screen tested, then the enclosed mastic must be wrapped 2 turns around the first shrink hose.
- Make sure you get 100mm overlap on the other shrink tub.

